


Timber edges are typically used as an edge treatment to tree pits within asphalt pathways outside the Central City. They may also be used as an edge treatment to asphalt or gravel pathways and along garden beds within parks and gardens.

Timber edges should be predominantly used for straight sections of edging.

Section: Edge of tree pit and asphalt paving

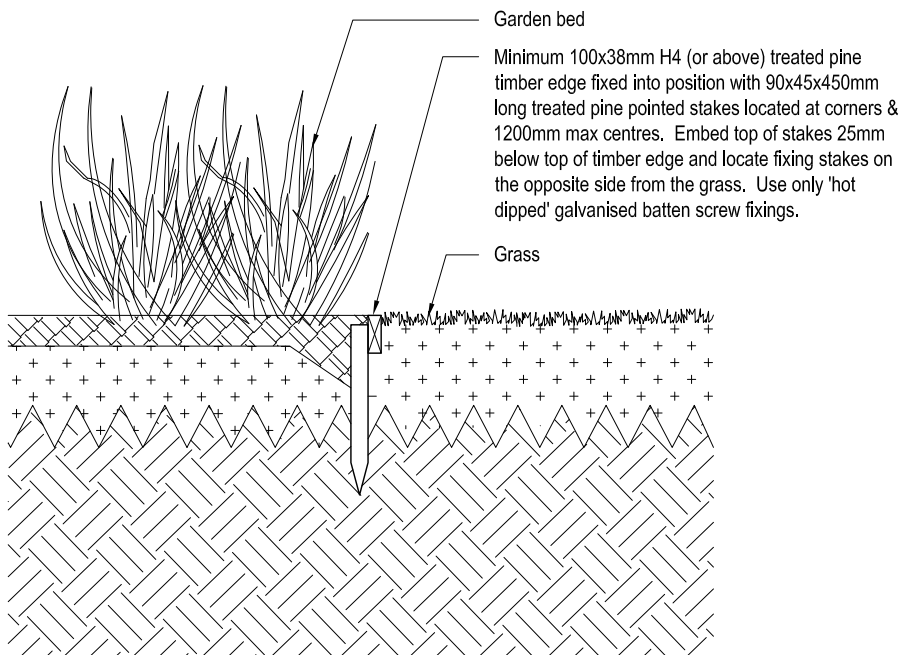

Section: Edge of garden bed and grass